

Digital Video Recorder

USER'S MANUAL





WARNING

RISK OF ELECTRIC SHOCK DO NOT OPEN



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and

Maintenance (servicing) instructions in the literature accompanying the appliance.

COMPLIANCE NOTICE OF FCC:

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS A DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGEY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE, IN WHICH CASE USERS WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT THEIR OWN EXPENSE.

CAUTION: CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT. THIS CLASS OF DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS.

The information in this manual is believed to be accurate as of the date of publication. The information contained herein is subject to change without notice. Revisions or new editions to this publication may be issued to incorporate such changes.

IMPORTANT SAFEGUARDS

	I
 Read Instructions All the safety and operating instructions should be read before the appliance is operated. Retain Instructions The safety and operating instructions should be retained for future reference. Cleaning Unplug this equipment from the wall outlet before cleaning it. Do not Use liquid aerosol cleaners. Use a damp soft cloth for cleaning. Attachments Never add any attachments and/or equipment without the approval of The manufacturer as such additions may result in the risk of fire, electric shock or other personal injury. Water and/or Moisture Do not use this equipment near water or in contact with water. Accessories Do not place this equipment on an unstable cart, stand or table. The equipment may fall, causing serious injury to a child or adult, and serious damage to the equipment. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer. Power Sources This equipment should be operated only from the type of power, please consult your equipment dealer or local power company. Spower Cords Operator or installer must remove power and TNT connections before handling the equipment. Sourd protection for this equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges. Overloading Not overload wall outlets and extension cords as this can result in the risk of fire or electric shock. Dighenet 1 (applied) Not overload wall outlets and extension cords as this can result in the risk of fire or electric shock. Never spill liquid of any kind on the Equipment. Servic	 Damage requiring Service Unplug this equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions: A. When the power-supply cord or the plug has been damaged. B. If liquid is spilled, or objects have fallen into the equipment. C. If the equipment has been exposed to rain or water. D. If the equipment does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the equipment to its normal operation. E. If the equipment has been dropped, or the cabinet damaged. F. When the equipment exhibits a distinct change in performance — this indicates a need for service. H. Replacement Parts When replacement parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards. S. Safety Check Upon completion of any service or repairs to this equipment, ask the service technician to perform safety checks to determine that the equipment is in proper operating condition. Field Installation This installation should be made by a qualified service person and should conform to all local codes. Correct Batteries Warning: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions. Timra A manufacturer's maximum recommended ambient temperature (Trma) for the equipment must be specified so that the customer and installer may determine a su
' '	ı İ

INDEX

1.	SAFETY CAUTIONS	6
	1.1 Power Source	6
	1.2 Installation	6
	1.3 Cleaning and Usage	7
2.	OUTLINE	8
	2.1 Functions	8
	2.2 System Organization	9
3.	DVR ORGANIZATION	10
	3.1 Front Panel	10
	3.2 Real Panel	11
	3.3 Remote Controller	12
4.	LIVE	13
	4.1 Live Screen	13
	4.1.1 Top Menu	14
	4.1.2 Bottom Menu	14
	4.1.3 CAMEO Menu	15
5.	SETUP	18
	5.1 SYSTEM SETUP	18
	5.1.1 GENERAL	19
	5.1.2 ALARM OUT	21
	5.1.3 DISK	21
	5.1.4 MONITOR	23
	5.1.5 ACCOUT	24
	5.1.6 CONFIG	25
	5.1.7 SHUTDOWN	26

INDEX

5.2 DEVICE SETUP	27
5.2.1 CAMERA	27
3.2.2 PTZ	28
5.2.3 SPOT	29
5.2.4 SEQUENCE	30
5.2.5 PRIVATE ZONE	31
5.3 EVENT SETUP	32
5.3.1 MOTION	32
5.3.2 ALARM IN	35
5.3.3 VIDEO LOSS	36
5.3.4 SYSTEM	37
5.3.5 DISPLAY	38
5.4 RECORD SETUP	39
5.4.1 SETUP &	39
5.4.2 EVENT PRE / POST	41
5.4.3 AUDIO	41
5.4.4 PANIC	42
5.5 NETWORK SETUP	43
5.5.1 LAN	43
5.5.2 SERIAL	45
5.5.3 DDNS	46
5.5.4 E-MAIL	47
5.6 SYSTEM INFORMATION	48
5.6.1 SYSTEM LOG	48
5.6.2 STATUS	49
5.6.3 VERSION	51

INDEX

6. SEARCH	52
6.1 Search Screen	53
6.1.1 Search Menu	53
6.1.2 Calendar Search	54
6.1.3 Event Search	55
6.1.4 Overlapped List	56
6.1.5 Panorama Search	57
6.1.6 Smart Search	57
6.1.7 Section Repeat Search	58
7. BACKUP	60
7.1 Playback with backup data	61
8. APPENDIX	62

8.1 Trouble Shooting	 62
-	

1. SAFETY CAUTIONS

Follow these instructions to keep the user safe and prevent property damage.
 Read them carefully before the use of the product.
 The responsibility falls on the user to install and use the product properly.

1.1 Power Source-related

- ① Insert the power plug fully and firmly into the power source.
 - Unstable connection may cause fire.



- ② Do not use a damaged power cord, plug or loose outlet.
 - It may cause electric shock or fire.



- ③ Do not plug several devices exceeding the rated capacity into a single outlet.
- Abnormal heat generation at the outlet may cause fire.



- ④ Do not bend nor pull the power cord. Do not place a heavy object on top of it.
 - It may cause electric shock or fire.



- (5) When unplugging the power cord, do not pull it out by touching the cord area or do not touch it with a wet hand.
 - It may cause electric shock or fire.



1.2 Installation-related

- (1) Do not place candlelight or cigarette light on top of the product or do not install the product near heating devices.
 - It may cause fire.



- 2 Do not place the power cord near heating devices.
- The exterior of the cord may peeled off, causing electric shock or fire.



- ③ Do not install the product in a place where a large amount of oil, smoke or moisture exists. Do not install the product in a vehicle or a place where water is splashed.
 - It may cause electric shock or fire.



- ④ Do not place the product on top of an unstable cart, stand or table. Do not block the air ventilation with table cloth or curtain.
- Internal temperature rise may cause fire.



 ⑤ Do not install the product in a narrow place. Keep the product a certain distance away from the wall.
 – Internal temperature rise may cause fire.



1.3 Cleaning and Usage-related

- ① Unplug the power plug during lightning, thunderstorm or when not in use for long periods of time.
- It may cause electric shock or fire.



- ② When taking the battery out from the remote control, keep them away from children to prevent from swallowing incidents.
 - Keep the battery away from babies.
- If a child swallowed the battery, immediately consult a doctor.



- ③ Do not place the container or base filled with water, liquids, chemicals, small piece of metal and heavy object on the product.
- If liquid flows into the product, it may cause electric shock or fire. A heavy object may drop from the top of the product, causing injury.



- ④ Do not use or store the product near combustible sprays and other flammable substances.
 It may cause explosion or fire.
- (5) If dust or water is present at the power plug's pin and contact area, wipe out the area.
 may cause electric shock or fire.



- (6) When cleaning the product, unplug the power cord and gently wipe using a soft cloth. Do not directly spray water on the product or do not use benzene, thinner or alcohol when cleaning.
 - It may cause electric shock or fire.



- O When replacing the battery, be sure to check the correctness of the polarity (+,-).
- If the battery polarity is wrong, generation of abnormal heat or leakage of internal liquid may cause fire, injury or contamination in the surrounding area.



In case the product was dropped or the case was damaged, switch off the product and unplug the power cord. Have a technician repair the product.
If the damaged product is used without repair, it may cause electric shock.



 Do not repair or disassemble the product by yourself or do not connect other connection devices without the manufacturer's approval.
 If repair is required, contact the reseller. Failure to

follow this instruction may cause electric shock or fire.



2. OUTLINE

2.1 Functions

This DVR provide superior video image quality on Live view and Playback.

- Pentaplex Operation Performance (Live, Recording, Playback, Backup, Network)
- Up to maximum 16 channel composite input ports depending on model.
- Various Recording mode. (Manual / Schedule / Event)
- Various Search functions. (Date/Hour search, Calendar search, Event Search)
- · Various Playback functions. (Normal / Fast / Slow / Step / Reverse / Smart / Panorama / Repeat)
- Overwrite Recording function.
- The DVR menu structure and on screen display is presented in a simple to use and logical GUI format.
- Support 16channel Audio.
- Support Mouse control.
- E-mail function (Alarm, Motion detection, Video loss, HDD fail and etc.)

2.2 System Organization



3. DVR ORGANIZATION

3.1 Front Panel Description

NOTE: Turn on the DVR after connecting the power cord, camera input and monitor completely



2 x USB IR receiver

*** Front Button**

The front panel of DVR is similar as normal VCR or Multiplexer and the functions are also similar . Front buttons have various functions and are used for DVR initial setting and others. Please refer to the below explanation.

NUMBER buttons (1 ~ 0)

Displayed selected camera number to full screen. And also these buttons are used to enter a password.

FUNCTION button

Select function in PTZ operation mode.

LIVE button

Change mode from search or playback mode to live mode.

ZOOM / IRIS / FOCUS button

Zoom, iris, focus control mode. Press to change modes.

+ / - button

Increase of decrease the zoom, iris, or focus parameter.

BACKUP button (PTZ PRESET)

Enter backup menu. Return to previous screen if this button is pressed again. Back to live mode by pressing "LIVE" button. In PTZ mode, it is used preset function button.

SEARCH button (ROTATE)

Enter search menu. Return to previous screen if this button is pressed again. Back to live mode by pressing "LIVE" button. In function mode, it is used display sequencing function.

INSTANT (Key) button

Start recording when this button is pressed in live mode. In function mode, it is used to button lock function.

SETUP button

Enter Setup menu. User need to Admin access permission. Return to previous screen if this button is pressed again.

PANO-RAMA button

In playback mode, it is used to start panorama function.

EXIT button

Exit setup mode and return to previous screen.

PTZ button

Enter PTZ mode.

SMART button

Start smart search function.

REPLAY button

Start playback function.

Direction Buttons (\blacktriangle , \blacktriangledown , \blacklozenge , \blacktriangleright)

This buttons are used when move to other menu or change the position of the CAMEO screen. In PTZ mode, it is used PAN/TILT function.

- ▲ : In Playback mode, it is Panorama search function button. In PTZ mode, it is used to move the camera to up.
- In Playback mode, it is Smart search function button. In PTZ mode, it is used to move the camera to down.
- In Playback mode, it is reverse play button and when paused screen, user can see each frame if this button is pressed manually. In PTZ mode, it is used to move the camera to left.
- In Playback mode, it is forward play button and when paused screen, use can see each frame if this button is pressed manually. In PTZ mode, it is use to move to camera to right.

NOTE: For the Smart search, recording data should be recorded by the Event recording. Otherwise, if user try to playback with Smart search, the screen is returned to live mode.

FAST REVERSE PLAY button (PTZ)

FAST FORWARD PLAY button (PLAY)

Playback with fast forward. Playback speed is changed if this button is pressed repeatedly. $(\triangleright, \triangleright \triangleright, \triangleright \triangleright \triangleright, \bullet \triangleright \flat, \bullet \triangleright \flat \bullet \bullet)$. In PTZ mode, it is used to Zoom in function button. In live mode, the last portion of recorded video is played.

※ USB 2.0 Port

For USB mouse ,firmware upgrade and data backup by inserting USB memory stick with this port.

3.2 Rear Panel



3.3 Front Panel Description

NOTE: Turn on the DVR after connecting the power cord, camera input and monitor completely



<Front DOOR CLOSE >



<Front DOOR OPEN >

3.4 Rear Panel



3.5 Remote Controller



% How to set ID

- ① Before setup the ID, Enter to the GENERAL SETUP and set the ID first. (Default is 0)
- 2 While pressing and holding the ID button, enter the unit address of the DVR by two-digit.
- ③ If the unit address is a single digit, enter two digit number by adding the number 0 as the first digit.
 (Example If the unit address is 1, the input value is 01.)
- ***** A single remote controller can change ID from 0 to 19 and independently control up to 20 DVRs.

4. LIVE

4.1 Live Screen



4.1.1 Top Menu

In live screen, if \blacktriangle button of the remote controller or front panel is pressed, or if the mouse cursor is placed over the end of the top area, the top menu is appeared.



4.1.2 Bottom Menu

In Live screen, if ▼ button of the remote controller or front panel is pressed, or if the mouse cursor is placed over the end of the bottom area, the bottom menu is appeared.



4.1.3 CAMEO Menu

In live screen, if the ENTER button of the remote controller or front panel is pressed, a blue square cursor will be appeared. If the ENTER button is pressed again, the CAMERA menu will be appeared.

CAN	IERA	COL	DR	
CAN	AEO (CHAN	GE	
P	LAYE	васк		
	FRE	EZE		
FF	REEZ	E ALL	6	
:	SEQU	ENCE		
	PT	z		
	zooi	VI X2		
	zoon	/I X4		
0	AUDIO	о ол		

• CAMEO CHANGE : The live camera can be changed to the selected channel.

If the camera number is selected at the pop-up menu shown below, the camera is changed to the selected channel.



- FREEZE : Live screen of the selected channel can be paused.
- FREEZE ALL : Live screen of the all channels can be paused.
- SEQUENCE : Live screen is rotated.



• **PTZ** : PTZ Camera should be installed otherwise the PTZ menu is not activated.

The following picture will be appeared when select PTZ menu.

SPEED SE	TUP
PRESET SI	TUP
PRESET T	OUR
PATTERN S	ETUP
PATTERN	TOUR
AUTO FO	CUS
POWE	R
LIGHT	
OSD ME	NU

*** Using Mouse :** On the above menu, when click the right button of mouse, the control screen for Menu, Zoom, Focus and Iris will be appeared.



- * Using Remote Controller or Front Key : The below Hot Key is available.
- Press the ENTER button on PTZ Camera channel.
- Press the ENTER button again then the CAMEO menu will be appeared.
- Select PTZ menu on the Live CAMEO menu.
- Press the ENTER button again, the above PTZ menu screen will be appeared.
- Zoom Control : In PTZ mode, press the Zoom (Back) button.
 - Zoom in Fast reverse play button / Zoom out The fast forward play button.
- Focus Control : In PTZ mode, press the Focus (Search) button.
 - (+) Fast reverse play button / (-) Fast forward play button.
- Iris Control : In PTZ mode, press the Iris (Pause) button.
 - (+) Fast reverse play button / (-) Fast forward play button.



- SPEED SETUP : Set the PTZ camera speed. (1 to 8)

<u>NOTE: If the mouse is used to move the PTZ camera, the movement speed depends on the position</u> of the mouse. As the mouse pointer moves away from the center, speed becomes faster.

- PRESET SETUP :

Set the preset position. If the position setup is saved, PTZ camera will be directed to the set position by preset number.

- PRESET TOUR :

6 different preset list can be created. If the created preset lists are set to "ON", recording is made with preset tour.

- PATTERN SETUP :

Pattern can be created by movement, zoom, focus and iris. After pressing the BEGIN button, adjust the PTZ camera position or zoom and then press the END button. All directions (up, down, left and right), zoom and iris settings are recorded.

- PATTERN TOUR : PTZ camera moves according to the saved pattern.

- AUTO FOCUS / POWER / LIGHT :

Auto focus, power and light functions can be turned on/off on each category.

- OSD MENU : Turn on/off the OSD menu.
- ZOOM X2 : Zoom in x2.
- ZOOM X4 : Zoom in x4.
- ADUIO ON : Turn on/off Audio.

5. SETUP

In this category, there are SYSTEM, NETWORK, DEVICE, RECORD and EVENT.

On the Top menu, select the [SETUP] menu icon.



After select the icon, the following LOGIN window will be appeared.

	ID			admin	
P	ASSWO	RD			
0	1	2	3	4	-
5	6	7	8	9	

Enter the password by the key buttons and press the OK button.

(The default password : 1)

5.1 SYSTEM SETUP

In this category, there are General, Alarm, Disk, Monitor, Account, Configuration and Shutdown.

Select the [SYSTEM] menu.



5.1.1 GENERAL

GENERAL	SYSTEM DATE / TI	ME
ALARM OUT		ENGLISH (ENGLISH)
DISK	KEY TONE	OFF
	UNIT ADDRESS	0
MONITOR	BASE CAMERA NO.	1
		OFF
ACCOUNT	RECORD RETENTION	OFF
CONFIG	BACKUP CONFIRM	OFF
		ON
SHUTDOWN		

[SYSTEM]

- LANGUAGE : Select the language. (English, Germany, French, Spanish, Japanese, Chinese, Italian, Russian, Dutch and Korean)
- KEY TONE : Turn on/off the buzzer sound of key.
- UNIT ADDRESS : Set the DVR ID. This ID can be used when use multi DVR in same place by one remote controller.
- BASE CAMERA NO. : Set the beginning number of camera. If set this value to 17, the camera number start with 17.
- MENU TIMEOUT : Keep the Menu screen for this value then escape from Menu.
- RECORD RETENTION : Prohibit the playback of passed data. (Select 0 to 99 days. If set 3 days, can not playback the data that elapsed 3 days.
- BACKUP CONFIRM : Confirm the backup process.(Log-in process)
- HDD OVERWRITE : Select on/off to overwrite data on Hard disk. NOTE: If set to [OFF], recording will be stopped automatically when disk is full.

5.1.1 GENERAL

GENERAL	SYSTEM		
DISK	DATE FORMAT	YYYY/I	MM / DD
DIGK	TIMEZONE	GMT+09:00	DST OFF
MONITOR	DATE DISPLAY	01	N
an and the second second	DATE / TIME	2011/12/13	16:49:44
ACCOUNT	NTP	01	N
CONFIG	HOLIDAY	0 DAYS	•
HUTDOWN			

[DATE / TIME]

- DATE FROMAT : Select the data format. (YY/MM/DD) / (MM/DD/YY) / (DD/MM/YY)
- TIMEZONE : Select the timezone and DST. The city which don't use DST is set to [OFF] automatically.
- DATE DISPLAY : Display date on live screen or not.
- DATE / TIME : Change date and time.
- NTP : Select the usage of NTP setting. DVR time is synchronized with NTP server and get the standard time. The default server is [pool.ntp.org] and User can input other server.

[Sync now] : Synchronize immediately. [Auto Sync] : Synchronize every day automatically.

• HOLIDAY : Add or delete holiday.

5.1.2 ALARM OUT

GENERAL		
	ALARM OUT	SIGNAL+
DISK	1	ON
	2	ON
MONITOR		
	ALARM SET	SET
ACCOUNT	ALARM CLEAR	CLEAR
CONFIG		
SHUTDOWN		

- SIGNAL : Select on/off to use alarm by channel.
- ALARM SET TEST : Check the alarm connection whether it works properly or not. Press the [SET] button then alarm device will be operated.
- ALARM CLEAR TEST : Press the [CLEAR] button then alarm device will not be operated.

5.1.3 DISK

GENERAL	INS	TALL	CHECK / USE		
	NO.	TYPE	SIZE	STATUS	INSTAL
ALARM OUT	1	HDD	976GB	IDLE	INSTAL
DISK	2	HDD	N/A	N/A	NONE
	3	HDD	N/A	N/A	NONE
MONITOR	4	HDD	N/A	N/A	NONE
	5	HDD	N/A	N/A	NONE
ACCOUNT	6	HDD	N/A	N/A	NONE
Township of Sectors	7	HDD	N/A	N/A	NONE
CONFIG	8	HDD	N/A	N/A	NONE
	9	HDD	N/A	N/A	NONE
SHUTDOWN	10	HDD	N/A	N/A	NONE

* <u>NOTE :</u> <u>When install HDD first time,</u> <u>after install HDD, should</u> <u>format by the [INSTALL]</u> <u>button.</u>

[INSTALL] - Display initial HDD install and information.

GENERAL	INSTALL CHECK / U	ISB
ALARM OUT	RECORD START TIME	2012/01/02 08:56:54
DISK	RECORD END TIME	2012/01/02 13:41:44
	DISK CHECK	START
MONITOR		
A 000 011117	USB RESET	SET
ACCOUNT	USB FORMAT	SET
CONFIG		
SHUTDOWN		

[CHECK / USB]

- **RECORD START TIME :** Display the earliest recorded data information.
- **RECORD END TIME :** Display the latest recorded data information.
- **DISK CHECK :** Check the data from the earliest recorded to the latest recorded.
- USB RESET : Reset the USB connection.
- USB FORMAT : Format the connected USB.

5.1.4 MONITOR

GENERAL		
ALARM OUT		
DISK	HDMI	1920x1080i 60Hz
	FILTER	ON
MONITOR	BORDER COLOR	GRAY
	ALPHA BLENDING	0
ACCOUNT	DISPLAY POSITION	
CONFIG		
SHUTDOWN		

- HDMI : Select the resolution for connected monitor.
- FILTER :
- **BORDER COLOR :** Change the border color.
- ALPHA BLENDING : Set the transparency of menu. (Set 1 to 20 and 20 is closer to the more transparent.)
- DISPLAY POSITON :

NO	CONTENT	GENERAL	
1	1440x900p 60Hz	AU	
2	1280x720p 60Hz	ALPHA BLENDING	
3	1920x1080p 60Hz		
4	1920x1080i 60Hz		0
			20
			OR CANCEL

[HDMI selected screen]

[ALPHA BLENDING selected screen]

5.1.5 ACCOUNT

GENERAL	DVR	CLIENT		
ALARM OUT	ADMIN1	admin	PERM	DEL
DISK	ADMIN2	NONE	PERM	DEL
	USER1	NONE	PERM	DEL
MONITOR	USER2	NONE	PERM	DEL
	USER3	NONE	PERM	DEL
ACCOUNT	USER4	NONE	PERM	DEL
CONFIG	USER5	NONE	PERM	DEL
	USER6	NONE	PERM	DEL
SHUTDOWN				

* Add / delete any user and give permission freely.

* When add new user, have to input new password.

When delete user, confirm again.

NOTE: (Default ADMIN password is 1), Initial user name can be modified but can not delete.

CAUTION:

Default Admin account must not be deleted before add new user. If delete default Admin user before add new Admin user, can not access on [SETUP] menu.

* By the **[PERM]** menu, can give permission to each ID.

5.1.6 CONFIG

GENERAL						
	SLOT	DATE	LO	AD	SAVE	DEI
ALARM OUT	DEFAULT	NONE	LO	AD	SAVE	DE
DISK	NONE	NONE	LO	AD	SAVE	DE
	NONE	NONE	LO	AD	SAVE	DEI
MONITOR	NONE	NONE	LO	AD	SAVE	DEL
ACCOUNT	NONE	NONE	LO	AD	SAVE	DEL
CONFIG	E	XPORT			START	
CONTO	IN	IPORT			START	
SHUTDOWN						

• SLOT : Select the slot to load or save on DVR memory.

* DEFAULT : Change factory default setting.

- DATE : Display the latest saved date.
- LOAD : Load the saved data.
- SAVE : Save the set data.
- DEL : Delete the saved data on Slot.
- EXPORT : Export the set data to USB or DVD.
- **IMPORT** : Import the set data to USB or DVD.



[IMPORT selected screen]

[EXPORT selected screen]

5.1.7 SHUTDOWN

GENERAL		
ALARM OUT		
DISK	RESTART	
MONITOR	SHUTDOWN	
ACCOUNT		
CONFIG		
SHUTDOWN		

- **RESTART** : Restart the DVR.
- SHUTDOWN : Shutdown the DVR.

5.2 DEVICE SETUP

In this category, there are Camera, PTZ, Spot, Sequence and Private Zone setting.

Select the [DEVICE] Menu.



5.2.1 CAMERA

CAMERA				
	CAM	ERA LABEL	ļ	ALL
PTZ	NIG	HT MODE	A	ло То
SPOT				
	CAM	TITLE	ENABLE +	HIDDEN +
SEQUENCE	2	CH02	ON	OFF 🔷
	3	CH03	ON	OFF _
PRIVATE ZONE	4	CH04	ON	OFF
	5	CH05	ON	OFF
	6	CH06	ON	OFF
	7	CH07	ON	OFF 🔽

• CAMERA LABEL : Select the camera label of live screen.

(ALL / NUMBER / NAME / OFF)

- NAME : Change the camera name. (If select the camera name, the virtual keyboard will be appeared.)
- **INSTALL** : Select On/Off button to use camera.
- HIDDEN : Select On/Off button to hide camera on live view. (Record works correctly.)

NOTE: If select [INSTALL] – [OFF], Camera name and number are not displayed.



If select the camera name, the virtual keyboard will be appeared. Max camera name should be less than 11 character.

[Virtual Keyboard]

5.2.2 PTZ

CAMERA	PT	Z PI	RESET	
PTZ	CAM	PORT +	ADDRESS	PROTOCOL +
SPOT	1	9600-8N1	1	NONE
GFOT	2	9600-8N1	2	NONE
SEQUENCE	3	9600-8N1	3	NONE
	4	9600-8N1	4	NONE
PRIVATE ZONE	5	9600-8N1	5	NONE
	6	9600-8N1	6	NONE
	7	9600-8N1	7	NONE

[PTZ]

- **PORT** : Select the Baud Rate for using PTZ camera.
- ADDRESS : Select the ID for using PTZ camera.
- **PROTOCOL** : Show the PTZ protocol list.

NOTE : baud rate, data bit, parity, stop bit, ID and protocol depend on PTZ camera for using.

CAUTION : When connect the camera on the RS-485 port, refer to the manual of camera manufacturer.

5.2.3 SPOT

CAMERA		
РТД		HD-SDI / HDMI
SPOT	CAMERA	1
	DEFAULT	1
SEQUENCE	SEQUENCE	OFF
	DWELL	5 SEC
PRIVATE ZONE	POPUP	OFF

CAMERA : Select the camera for display on spot monitor.

DEFAULT : Select the camera for display on spot monitor when sequence is off.

SEQUENCE : Select On/Off for sequence screen.

DWELL : Select the interval time to move next channel. The max value is 256 sec.

POPUP : Select On/Off for pop-up screen when event is occurred.



[CAMERA selection screen]

[INTERVAL selection screen]

5.2.4 SEQUENCE

CAMERA			
	PAGE DWELL TIME	2 SEC	
PTZ	CAMEO DWELL TIME	2 SEC	
SPOT			
	CAMERA	SELECT +	
SEQUENCE	1	ON	-
	2	ON	=
PRIVATE ZONE	3	ON	
	4	ON	
	5	ON	

PAGE DWELL TIME : Select the dwell time to move next channel.

CAMEO DWELL TIME : Select the dwell time for CAMEO sequence.

<u>NOTE: CAMEO sequence means selected camera is rotated in select cameo of division screen.</u> <u>Camera image which is shown on the other CAMEO of division screen is not included in</u> <u>CAMEO sequence.</u>

2 SEC
2 SEC
SELECT +
ON

[DWELL-TIME selected screen]

[CAMERA SELECT screen]

5.2.5 PRIVATE ZONE

CAMERA			
	ZONE ENABLE	OFF	5
PTZ	ZONE COLOR	BLACK	
SPOT			
	CAMERA	ZONE	
SEQUENCE	1	OFF	-
Contraction of the local division of the	2	OFF	=
PRIVATE ZONE	3	OFF	
	4	OFF	
	5	OFF	-
			12

- ZONE ENABLE : Select On/Off to use. (LIVE mode/ SEARCH mode)
- ZONE COLOR : Select the color to hide.
- ZONE : Select the zone to hide.

(When select the ZONE button, the camera image will be appeared.

<u>NOTE : Move the blue dot to a desired location and press the OK button.</u> <u>Drag and move it to include the desired area and press the OK button.</u> <u>As a result, the area is covered and hidden with the selected color</u>

<u>TIP : On the screen, if click the right button of mouse, a menu will be appeared.</u> <u>Using this menu, a selected area can be delete or saved, or returned previous menu.</u>



[Mouse right button selected screen]

[ZONE selected screen]

5.3 EVENT SETUP

In this menu, there are Motion, Alarm in, Video Loss, System and Display setup.

Select the [EVENT] menu.



5.3.1 MOTION

MOTION	INP		TION	
ALARM IN	CAM	ACTIVE +	LEVEL +	AREA +
	1	OFF	3	ON
10202000	2	OFF	3	ON
SYSTEM	3	OFF	3	ON
Sentoning Controls	4	OFF	3	ON
DISPLAY	5	OFF	3	ON
	6	OFF	3	ON
	7	OFF	3	ON

[INPUT]

- ACTIVE : Select On/Off to activate motion.
- LEVEL : Select the sensitive for motion trigger. (Select 1 to 5 level)
- AREA : Select the motion area.

TIP: If select the ACTIVE+ / LEVEL+ / AREA+ menu, can change all setting at once.

AREA SETUP



In the Area setup, the Red square is shown at the top left side of the screen. If select the OK button, the dot color will be changed to Green. A motion area can be selected by the direction buttons.

<u>NOTE : When the status is Red square, can move any direction to select.</u> <u>When the status is Green color, can select motion area or cancel the set area.</u>

After set the motion area, if select the MENU button, the following screen will be appeared.



- SELECT ALL : Select all motion area.
- CLEAR ALL : Clear all motion area.
- SAVE : Save the changed setting.
- CLOSE : Close the pop-up screen.
- EXIT : Exit the motion area setup.

MOTION	IN	PUT	ACTI	ON		
ALARM IN	CAM	RECORD	ALARM	BUZZER	PRESET	E-MAI
VIDEOLOSS	1	OFF	OFF	OFF	1	OFF
100000	2	OFF	OFF	OFF	1	OFF
SYSTEM	3	OFF	OFF	OFF	1	OFF
	4	OFF	OFF	OFF	1	OFF
DISPLAY	5	OFF	OFF	OFF	1	OFF
	6	OFF	OFF	OFF	1	OFF
	7	OFF	OFF	OFF	1	OFF

[ACTION]

- RECORD : Select the channel for record.
- ALARM : Select On/Off for alarm.
- **BUZZER** : Select On/Off for buzzer.
- **PRESET** : Set the preset number.

(When motion is triggered, the PTZ camera move to the set preset number position)

• E-MAIL : Select On/Off for e-mail notification.

TIP: If select to the [DEFAULT], only record the channel which is occurred event.



5.3.2 ALARM IN

MOTION	INPUT	ACTIC	NN	
ALARM IN	NO.	ACTIVE +	NAME	TYPE +
UDEOLOSS	1	OFF	s01	NO
VIDEO LOGO	2	OFF	s02	NO
SYSTEM	3	OFF	\$03	NO
Contraction of the	4	OFF	s04	NO
DISPLAY	5	OFF	s05	NO
	6	OFF	s06	NO
	7	OFF	s07	NO

<u>TIP:</u> <u>If select the ACTIVE+ / TYPE+</u> <u>menu, can change all setting at</u> <u>once.</u>

[INPUT]

- ACTIVE : Select On/Off to activate alarm.
- NAME : Type any name.
- TYPE : Select the alarm type. (NO : Normal Open / NC : Normal Close)

MOTION	IN	INPUT		ACTION		
ALARM IN	NO.	RECORD	ALARM	BUZZER	PRESET	E-MA
VIDEOLOSS	1	OFF	OFF	OFF	1	OFF
10202000	2	OFF	OFF	OFF	1	OFF
SYSTEM	3	OFF	OFF	OFF	1	OFF
	4	OFF	OFF	OFF	1	OFF
DISPLAY	5	OFF	OFF	OFF	1	OFF
	6	OFF	OFF	OFF	1	OFF
	7	OFF	OFF	OFF	1	OFF

[ACTION]

- RECORD : Select the channel for record.
- ALARM : Select On/Off for alarm.
- **BUZZER** : Select On/Off for buzzer.
- **PRESET** : Set the preset number.

(When motion is triggered, the PTZ camera move to the set preset number position)

• E-MAIL : Select On/Off for e-mail notification.

5.3.3 VIDEO LOSS

MOTION	INPUT ACTIC	DN
ALARM IN	CAMERA	ACTIVE +
VIDEOLOSS	1	ON
VIDEO ECOU	2	OFF
SYSTEM	3	OFF
	4	OFF
DISPLAY	5	OFF
	6	OFF
	7	OFF

<u>TIP:</u> <u>If select the ACTIVE+ menu.</u> <u>can change all setting at once.</u>

[INPUT]

• ACTIVE : Select On/Off to activate.

MOTION	IN	PUT	ACTI	ACTION			
ALARM IN	CAM	RECORD	ALARM	BUZZER	PRESET	E-MAI	
	1	OFF	OFF	OFF	1	OFF	
	2	OFF	OFF	OFF	1	OFF	
SYSTEM	3	OFF	OFF	OFF	1	OFF	
MICLARING LUCING	4	OFF	OFF	OFF	1	OFF	
DISPLAY	5	OFF	OFF	OFF	1	OFF	
	6	OFF	OFF	OFF	1	OFF	
	7	OFF	OFF	OFF	1	OFF	

[ACTION]

- **RECORD** : Select On/Off for record.
- ALARM : Select On/Off for alarm.
- **BUZZER** : Select On/Off for buzzer.
- **PRESET** : Set the preset number.

(When motion is triggered, the PTZ camera move to the set preset number position)

• E-MAIL : Select On/Off for e-mail notification.

5.3.4 SYSTEM

MOTION	WARNING DISK	E-MAIL	
SENSOR			
VIDEO LOSS		1 HOUR	
SYSTEM	DISK WARNING	POPUP	
	THRESHOLD	60	0
DISPLAY		27 C	
	-		

[WARNING]

- CHECK INTERVAL : Select the check interval. (Select 1 hour to 24 hour)
- DISK WARNING : Select how to give a warning if disk error. (OFF, POPUP, POPUP + BUZZER)
- THRESHOLD : Critical value for Warning
- CURRENT TEMP. : Current temperature of the system

SENSOR		
IDEO LOSS	DISK FULL WARNING	ON
	USED SPACE	90 %
SYSTEM	ALARM	1
-	BUZZER	OFF
DISPLAY	MESSAGE	ON

[DISK]

- DISK FULL WARNING : Select ON/OFF to disk full warning.
- USED SPACE : Display the used space
- ALARM : Select the channel for alarm out.
- BUZZER : Select On/Off for buzzer.
- **MESSAGE** : Select On/Off for message.

MOTION	WARNING DISP	E-MAIL
ALARM IN		
IDEO LOSS	POWER	OFF
	MENU	OFF
SYSTEM	LOGIN FAIL	OFF
	DISK FULL	OFF
DISPLAY	LOG IN	OFF
	S.M.A.R.T.	OFF

[E-MAIL] – Select option On/Off for e-mail notification.

POWER / MENU / LOGIN FAIL / DISK FULL / LOG IN / SMART

5.3.5 DISPLAY

MOTION		
	CAMERA	POPUP DWELL +
ALARM IN	1	2 SEC
VIDEO LOSS	2	2 SEC
10101000	3	2 SEC
SYSTEM	4	2 SEC
	5	2 SEC
DISPLAY		
	EVENT MESSAGE	ON
	EVENT POPUP	OFF

- **DISPLAY** : Select display time by second. (Select 0 to 100)
- EVENT MESSAGE : Select On/Off to display event message.
- EVENT POPUP : Select On/Off to pop-up.

5.4 RECORD SETUP

Select the [RECORD] menu.



In this menu, there are Setup, Record, Pre/Post, Audio, Panic Setup

5.4.1 SETUP & RECORD

			SCHEDULE		- 10	
			RECORD	RECORD MC	DE	CONTINUOUS
			EVENT		ED ON	
			AUDIO	DAY TIME	PROM	00:00:00
				WEEKEND	OFF	OFF
	RD SETUP		VEEKEND			
	DAY		VEEKEND			
RECO SCHEDULE RECORD	DAY	NIGHT V	VEEKEND		ок	GANGE
RECO	DAY	NIGHT V NORMAL+ 7.5, HIGHEST	EVENT+ 7.5, HIGHEST		ок	GAMG
RECO SCHEDULE RECORD EVENT	DAY CAMERA	NORMAL+ 7.5, HIGHEST 7.5, HIGHEST	EVENT+ 7.5, HIGHEST 7.5, HIGHEST		ок	GANG
RECO SCHEDULE RECORD EVENT AUDIO	DAY CAMERA 1 2 3	NORMAL+ 7.5, HIGHEST 7.5, HIGHEST 7.5, HIGHEST	EVENT+ 7.5, HIGHEST 7.5, HIGHEST 7.5, HIGHEST		ОК	CANC
RECOR SCHEDULE RECORD EVENT AUDIO	DAY CAMERA 1 2 3 4	NIGHT V NORMAL+ 7.5, HIGHEST 7.5, HIGHEST 7.5, HIGHEST 7.5, HIGHEST	EVENT+ 7.5, HIGHEST 7.5, HIGHEST 7.5, HIGHEST 7.5, HIGHEST		ОК	CANC
RECO SCHEDULE RECORD EVENT AUDIO MANUAL	DAY CAMERA 1 2 3 4 5	NIGHT V NORMAL+ 7.5, HIGHEST 7.5, HIGHEST 7.5, HIGHEST 7.5, HIGHEST 7.5, HIGHEST	EVENT+ 7.5, HIGHEST 7.5, HIGHEST 7.5, HIGHEST 7.5, HIGHEST 7.5, HIGHEST		ОК	CAME
RECO SCHEDULE RECORD EVENT AUDIO MANUAL	DAY CAMERA 1 2 3 4 5 6	NIGHT V NORMAL+ 7.5, HIGHEST 7.5, HIGHEST 7.5, HIGHEST 7.5, HIGHEST 7.5, HIGHEST	EVENT+ 7.5, HIGHEST 7.5, HIGHEST 7.5, HIGHEST 7.5, HIGHEST 7.5, HIGHEST 7.5, HIGHEST		OK	GANG

• SETUP MODE : Select the record schedule. (CONTINUOUS / SCHEDULE)

[CONTINUOUS]

- DAY TIME : Select the day time. (The night time is changed automatically according to the day time zone)
- WEEKEND : Set the weekend zone.

[DAY] / [NIGHT] / [WEEKEND]

- TIME : Set the recording frame and resolution by channel.
- EVENT : Set the event recording. (Frame / Resolution / Post recording time [5 to 100 second])

[SCHEDULE]

• Set 3 different recording setup by day and time. (SET1, SET2, SET3)

This is related with [RECORD] menu so [CUSTOM] mode should be matched with [RECORD] menu.

<u>TIP : For SET1, SET2, SET3 recording, change the setting [SETUP MODE] to [CONTINUOUS] and enter to the [RECORD] menu then change the setting.</u>

SCHEDULE		FOODD	HODE			0.014			
RECORD	R	BCORD	MODE		12	15	49	21	
	SUN	ТŤ	ТŤГ	ПŤГ	ΠŤ	ГŤГ	ПÏ	ПП	
EVENT	MON								
411010	TUE								[SCHEDULE selected scree
AUDIO	WED								
MANUAL	THU						ш		
MANUAL	FRI								
	SAT	+++			+++		\mathbf{H}		
	HOL	111			111		ш	ш	
		1	SET 1	SE	T 2	SET	3	NONE	

If set to [CONTINUOUS] in [SCHEDULE] menu, the DAY / NIGHT / WEEKEND menu will be changed to SET1 / SET2 / SET3. Also set the frame and resolution.

RECORD	CAMERA	NORMAL+	EVENT+	
EVENT	1	7.5, HIGHEST	7.5, HIGHEST	[RECORD] screen after
A service controls	2	7.5, HIGHEST	7.5, HIGHEST	[SCHEDULE] mer
AUDIO	3	7.5, HIGHEST	7.5, HIGHEST	
	4	7.5, HIGHEST	7.5, HIGHEST	
MANUAL	5	7.5, HIGHEST	7.5, HIGHEST	
	6	7.5, HIGHEST	7.5, HIGHEST	
	7	7.5, HIGHEST	7.5, HIGHEST 🔽	

<u>TIP : The frame can be set by the direction button in setup screen.</u>

5.4.2 EVENT PRE / POST

	CAMERA	PRE RECORD+	POST RECORD+
RECORD	1	5 SEC	10 SEC
EVENT	2	5 SEC	10 SEC
	3	5 SEC	10 SEC
AUDIO	4	5 SEC	10 SEC
Alexandratic Construction	5	5 SEC	10 SEC
IANUAL	6	5 SEC	10 SEC
	7	5 SEC	10 SEC
	8	5 SEC	10 SEC

- PRE RECORD : Sets Pre-event recording time (Max 60 second)
- POST RECORD : Sets Post-event recording time (Max 100 second)

5.4.3 AUDIO

SCHEDULE			
	AUDIO	RECORD+	
RECORD	1	OFF	
	2	OFF	
	3	OFF	
AUDIO	4	OFF	
	5	OFF	
MANUAL	6	OFF	
	7	OFF	
	8	OFF	

• RECORD : Select On/Off for audio recording by channel.

TIP: If select the RECORD+ menu, can change all setting at once.

5.4.4 PANIC

	CAM	FPS+	RECORD QUALITY+	AUDIO
RECORD	1	7.5	HIGHEST	ON
EVENT	2	7.5	HIGHEST	ON
	3	2 7.5 3 7.5 4 7.5	HIGHEST	ON
AUDIO	4	7.5	HIGHEST	ON
	5	7.5	HIGHEST	ON
ANUAL	6	7.5	HIGHEST	ON
	7	7.5	HIGHEST	ON
	8	7.5	HIGHEST	ON

• **FPS** : Select the recording frame by each channel.

• Quality : Select the resolution by each channel.

• AUDIO : Select On/Off for audio recording by each channel.

5.5 NETWORK SETUP

In this menu, there are Network, Serial, DDNS, E-mail setup.

Select the [NETWORK] menu.



5.5.1 LAN

LAN	SERVER SERVER2	CLIENT	
SERIAL	DHCP	ON	
DDNS	HOST NAME	dvr	
- 1999-1999-1999-1999-1999-1999-1999-19	IP ADDRESS	0.0.0	
E-MAIL	NETMASK	0.0.0	
	GATEWAY	0.0.0	
	DNS SERVER	192.168.1.1	
_		START	

[SERVER]

• DHCP : Select On/Off for dynamic IP.

If Dynamic IP is OFF, DVR get IP address from router automatically.

- HOST NAME : Type any Host name.
- IP ADDRESS : Type IP address. (Available when DYNAMIC IP is OFF)
- NETMASK: Type Subnet mask. (Available when DYNAMIC IP is OFF)
- GATEWAY : Type Gateway. (Available when DYNAMIC IP is OFF)
- DNS SERVER : Type DNS server. (Available when DYNAMIC IP is OFF)
- CHECK INTERNET : Check internet status for use.

LAN	SERVER	VER2 CLIENT
SERIAL		
DDNS		
E-MAIL		0FF 192 168 0 10
	NETMASK	255.255.255.0

[SERVER2]

- DHCP : Select On/Off for dynamic IP.
- IP ADDRESS : Type IP address. (Available when DYNAMIC IP is OFF)
- NETMASK : Type Subnet mask. (Available when DYNAMIC IP is OFF)

LAN	SERVER SERVER2	CLIENT	
	CLIENT ACCESS	ALL	
SERIAL	BEGIN ADDRESS	END ADDRESS	
DDNS	0.0.0.0	0.0.0.0	
	0.0.0.0	0.0.0	
E-MAIL	0.0.0.0	0.0.0.0	
	XMS PORT (TCP)	9013	
	WEB PORT (TCP)	80	
	REMOTE RESTART	OFF	
	REMOTE CONFIG	ON	

[CLIENT]

- CLIENT ACCESS : Select client access options. (ALL / RANGE)
- **BEGIN ADDRESS / END ADDRESS** (When select RANGE option, type the IP address to accept) : Input the acceptable IP address.
- SMS / WEB PORT (TCP) : Select SMS / Web Port.
- **REMOTE RESTART :** Select On/Off to restart DVR at remote.
- **REMOTE CONFIG** : Select On/Off to change configuration.

5.5.2 SERIAL

LAN			
OFFICIAL	RS-232 INPUT SETUP	IP	
SERIAL	SERIAL TYPE	NONE	
DDNS	MODEL	NONE	
	PORT	9600-8N1	
E-MAIL			
	RS-485 INPUT SETUP		
	SERIAL TYPE	NONE	
	MODEL	NONE	
	PORT	9600-8N1	

[RS-232 INPUT SETUP]

- SERIAL TYPE : Select external device.
- **MODEL** : Select the protocol to use.
- PORT : Select the Baud Rate / DATA bit / Parity / Stop Bit.

[RS-485 INPUT SETUP]

- SERIAL TYPE : Select external device.
- **MODEL** : Select the protocol to use.
- PORT : Select the Baud Rate / DATA bit / Parity / Stop Bit.

5.5.3 DDNS

LAN	-		
SERIAL	DDNS SERVER	NONE	
DDNS			
	HOST NAME		
E-MAIL	USER NAME		
	PASSWORD	****	
	ROUTER IP	ON	
	STATUS	UNCHECKED	CHECH
	-		

- DDNS SERVER : Select DDNS server. (ezddns.com / dyndns.com / changeip.com)
- HOST NAME : Input the host name from the registered on DDNS server.
- USER NAME : Input the user name from the registered on DDNS server.
- **PASSWORD** : Input the password from the registered on DDNS server.
- **ROUTHER IP** : Select On/Off for sending IP information to the DDNS server.
 - If use any router, this setting should be [ON].
- **STATUS** : Check the connection status.

<u>NOTE : For using DDNS server, firstly connect the DDNS server and register Host name, User name</u> <u>password then input those information on above menu.</u>

5.5.4 E-MAIL

LAN	ADDRES	S SERVER		
	SEND MA	IL SCHEDULE	FROM	то
SERIAL	OFF	ON	00:00:00	23:59:5
DDNS				
	NO.	E-MA	IL ADDRESS	
E-MAIL	1			
	2			
	3			
	4			_
	5			
	6			

[ADDRESS]

- SEND E-MAIL : Select On/Off for use.
- SCHEDULE : Set the usage time. (From : Start time / To : End time)
- E-MAIL ADDRESS : Input the E-mail address to receive.

LAN	ADDRESS	RVER
SERIAL	MAIL SERVER	DVR SYSTEM
DDNS	USER NAME	UserName
	USER E-MAIL	email@ddnsdvr.com
E-MAIL	SERVER ADDRESS	ddnsdvr.com
	SERVER PORT	25
	LOGIN ID	Userid
	LOGIN PASSWORD	****

[SERVER]

- MAIL SERVER : Select the mail server. (SMTP server / DVR System)
- USER NAME : Input the user name.
- USER E-MAIL : Input the user e-mail address.
- SERVER ADDRESS : Input the server address.
- SERVER PORT : Input the server port.
- LOGIN ID : Input the Login ID.
- LOGIN PASSWORD : Input the Login password.

5.6 SYSTEM INFOMATION

In this menu, there are System Log, Status, Version.

On the Top menu, select the [INFORMATION] menu icon.

5.6.1 SYSTEM LOG

STEMLOG		10/	05~10/10
STATUS	NO.	DATE	SYSTEMLOG
VERSION	0192	10/10 17:20:27	Login Success(ID:root)
VENDION	0191	10/10 17:13:44	Monitor Setup Changed
	0190	10/10 17:13:29	Monitor Setup Changed
	0189	10/10 17:13:18	Login Success(ID:root)
	0188	10/10 17:01:32	Logout
	0187	10/10 16:52:34	Weak Camera Signal 8
	0186	10/10 16:52:34	Weak Camera Signal 4

• Check the system log by the left, right direction button.

5.6.2 STATUS

YSTEM LOG	DISK RECORD AU	DIO CAMERA
STATUS	FIRST RECORD	2012/01/02 08:56:54
VERSION	LAST RECORD	2012/01/02 13:41:44
Construction .	DISK CAPACITY	999GB
	USED SPACE	18GB (1%)
	AVAILABLE SPACE	981GB (99%)
	HDD OVERWRITE	ENABLE
		FORMATION

[DISK]

- Display HDD Status.
- CHECK SMART NOW : Check the smart.
- SMART INFORMATION : Show the smart information.

SYSTEM LOG	DISK	AUDIO CA	MERA	
STATUS	SCHEDULE NIGHT			
VERSION	CAM	TIME	EVENT	
	1	7.5, HIGHEST	7.5, HIGHEST	
	2	7.5, HIGHEST	7.5, HIGHEST	
	3	7.5, HIGHEST	7.5, HIGHEST	
	4	7.5, HIGHEST	7.5, HIGHEST	
	5	7.5, HIGHEST	7.5, HIGHEST	
	6	7.5, HIGHEST	7.5, HIGHEST	
	7	7.5, HIGHEST	7.5, HIGHEST	

[RECORD]

• Display RECORD Status.

STATUS

STATUS	CAMERA	RECORD
VERSION	1	OFF
	2	OFF
	3	OFF
	4	OFF
	5	OFF
	6	OFF
	7	OFF

[AUDIO]

Display AUDIO Status.

	DISK RECOR	D AUDIO CAME	RA
STATUS	RESOLUTION	AUTO (1920	X 1080p)
VERSION	CAMERA	RESOLUTION	STATUS
	1	310	358
	2		
	3		5 5 .
	4		0.
	5)) 2 2	
	6	•	5
	7	(•	

[CAMERA]

Display CAMERA Status

5.6.3 VERSION

SYSTEM LOG		
-	VERSION	2.01.00.30
STATUS	PRODUCT. DATE	Dec 23 2011, 10:54
VERSION	VIDEO CODEC	110823.1
	VIDEO	VIDEO 16CH HD
	AUDIO	AUDIO 16CH HD
	VIDEO FORMAT	AUTO
	HOST ID	HFTM-FMFF22-023B18
	MAC ADDRESS 1	00:19:19:02:3B:18
	MAC ADDRESS 2	00:19:19:02:3B:19

• Display DVR version and information.

6. SEARCH



After select the menu, the following Log-in window will be appeared.

	ID			admin	
P	ASSWO	RD	<u> </u>		
0	1	2	3	4	-
5	6	7	8	9	
				UK)	CANCE
					Cumar
ARCH	/				
ARCH	/				
ARCH	RGET		HDD		
TA		SEAR	HDD		
ARCH		SEARC	HDD CH		
	RGET QUICK CAL EVEN	SEARC ENDAR	HDD CH CH LIST		
TA	RGET QUICK CAL EVEN DVERL/ GO 1	SEARC ENDAR T SEAR APPED I	HDD CH CH LIST T		
	RGET QUICK CAL EVEN DVERL/ GO 1	SEARC ENDAR SEARCA SEAR	HDD CH CH LIST T		

Enter the password by the key buttons and press the ENTER button.

(The default password : 1)

- QUICK SEARCH : Designated time search by User
- CALENDAR : Search by date and time with Calendar.
- EVENT SERARCH : Search by event
- OVERLAPPED LIST : Search the overlapped data by changing time
- GO TO FIRST : Search with initial saved data.
- GO TO LAST : Search with the latest saved data.

6.1 Search Screen



6.1.1 Search Menu

When mouse cursor is placed over on the bottom side, the Search menu is appeared.



* As in the live screen, the top menu can be used in the search screen.

6.1.2 CALENDAR SEARCH

	◀		2011 / 10			
SUN	MON	TUE	WED	THU	FRI	SAT
				_		1
2	3	4	5	6	7	8
9	10	11	12	13	14	15
16	17	18	19	20	21	22
23	24	25	26	27	28	29
30	31					

a. Select the data by the direction button.

- Recorded data is displayed the orange color.



b. Select the time by the direction button.

- After select hour, minutes will be appeared.



6.1.3 EVENT SEARCH

EARLIEST RECORD	10/05/2011 16:58:11
ATEST RECORDING	10/10/2011 17:20:16
DATE	10/10/2011
MOTION	ON
ALARM IN	ON
VIDEO LOSS	ON
SELECT CAMERA	ON
VIEW SEA	ARCH LOG

• DATA : Select Date to search.

- **MOTION :** Select On/Off event for search.
- ALARM IN : Select On/Off event for search.
- VIDEO LOSS : Select On/Off event for search.
- SELECT CAMERA : Select the camera for search.
- VIEW SEARCH LOG : Display selected event log.

NO.	TIME	DST	CAMERA	EVENT
	_			
◀ 0 - 23	HOUR		PREV NEX	(Т GOTO

- HOUR : Select time period to see.
- **PREV** : Display previous page.
- NEXT : Display next page.
- GOTO : Display the image by selected event.

6.1.4 OVERLAPPED LIST

NO.	FROM	то
1	10/11/11 15:55:22	10/11/11 14:55:22
		-
		(TTTTT)
	PREV	NEXT

• If user change the time or applied DST (Daylight Saving Time), there will be overlapped data.



• After select the list, if select the [PLAY] button, can search [QUICK SEARCH] or [EVENT SEARCH].

6.1.5 PANORAMA SEARCH

- During normal search, press the [PANORAMA] button.
- By mouse, click the right mouse button and click the [PANORAMA] Search.
- Playback with frame by frame.



6.1.6 SMART SEARCH

- During normal search, press the [SMART] button.
- Find only event and playback automatically without interval.



6.1.7 SECTION REPEAT SEARCH

• During normal search, press the [LOCK] button.

When press one time, the start position is set, press one more time, the end position is set.

- By mouse, click the below red circle button.
- Only playback the set section repeatedly.



• In search screen, display the following mark.



***** Button Explanation in Search mode

Remote Controller or Front button

Button	Explanation
SEARCH	Display the [SEARCH] menu.
ESC	Cancel the Search mode or return to the live screen.
ENTER	Select the CAMEO menu.
FAST REVERSE	When reverse play, up and down play speed.
FAST FORWARD	When forward play, up and down play speed.
PAUSE	Pause the playback.
FORWARD PLAY	Playback the data.
REVEERSE PLAY	Reverse Play the data.
DISPLAY	Display division screen. (1,4,9,16)

7. BACKUP

On the Top menu, select the [BACKUP] menu icon.



After select the menu, the following Log-in window will be appeared.

	ID			admin	
P	ASSWO	RD			
0	1	2	3	4	4
5	6	7	8	9	

Enter the password by the key buttons and press the ENTER button.

(The default password : 1)

TARGET	NONE	NONE
FROM	10/05/2011	16:58:11
TO	10/10/2011	17:20:28
BACKUP TITLE	back	CUP
SELECT CAMERA	ON	
EARLIEST RECOR	10/05/2011 16:58:11	
LATEST RECORD	10/10/2011 17:20:28	
REQUIRE SPACE	ESTIMATE	0.00MB
	WRITE	

- TARGET : Select the device to backup. (USB / DVD)
- **FROM** : Select the start date and time.
- **TO** : Select the end date and time.
- BACKUP TITLE : Type any title.
- SELECT CAMERA : Select the camera for backup
- EARLIEST RECORD : Display the earliest record.
- LATEST RECORD : Display the earliest record.
- REQUIRE SPACE : Display the data capacity for selected data.
- WRITE : Start the backup.

7.1 Playback with backup data



- After backup, the DVR Player is copied with data.
- Backup data only can be played on DVR Player at PC.
- Can export to JPEG still shot.

8. APPENDIX

8.1Trouble Shooting

SYMPTOM	MEASURES
No Power	If the power LED is not lighted, check the below items. - Check the power plug and outlet. (Refer to the [Cautions for safety] - Connect the power cord to the power connector of DVR properly.
No camera image	 Connect the camera cable to the DVR port properly. Check the connected monitor cable with DVR. (Refer to the [Rear Panel Configuration]) Check the camera power and lens setting. As this may be caused by a temporary error, restart DVR. As camera setting may be wrong, initialize the camera and DVR. * How to initialize DVR Main Menu > Configuration > Default Load > O.K > O.K !! Caution: After DVR initialization, DVR setting is returned factory default. Need to backup the configuration before initialize DVR.
Not record on DVR	 If the recording LED does not flicker, check the below items. HDD should have enough space otherwise could not be recorded. Delete data in HDD or change the [HDD OVERWRITE] setting to [ON]. (Refer to the [GENEL Setup] – [HDD OVERWRITE]) Replace the HDD because the HDD may be failed. Check the recording setup.
Not connected Network	If the network LED does not flicker, check the below items. - Check the connected hub or router. - Check the network cable and connection. - Check the network setup.

Not work remote controller	 Check the battery polarity. Check the remote controller ID. (Refer to the [Remote Controller Configuration]) Focus on the remote controller to the IR sensor. Use the remote controller within 7 meters from DVR. Change the battery.
No sound in live view	 Check the mike and audio cable with DVR port. (Refer to the [Real Panel Configuration]) Check the speaker power which is connected on Audio port. Turn on the Audio in the CAMEO menu. (Select the channel which is connected Audio and turn on. * CAMEO menu will be appear when click the right button of mouse.
No sound in search	 Set to [Audio] - [ON]. (If set to [OFF], sound is not heard during search.) Although the record icon is lighted, if there is no audio input, sound is not heard. ※ Audio record can be changed [Main Menu] > [Record Setup].
Not work smart search	 For smart search, event record should be set. If event record is not set, when select the smart search, return to the live screen from search mode.

Г